


Grandstream GXP2130


[Back to Phone Model Examples](#)

This is an executive phone compatible with the predefined “Grandstream GXP” template.

Log into the phone interface

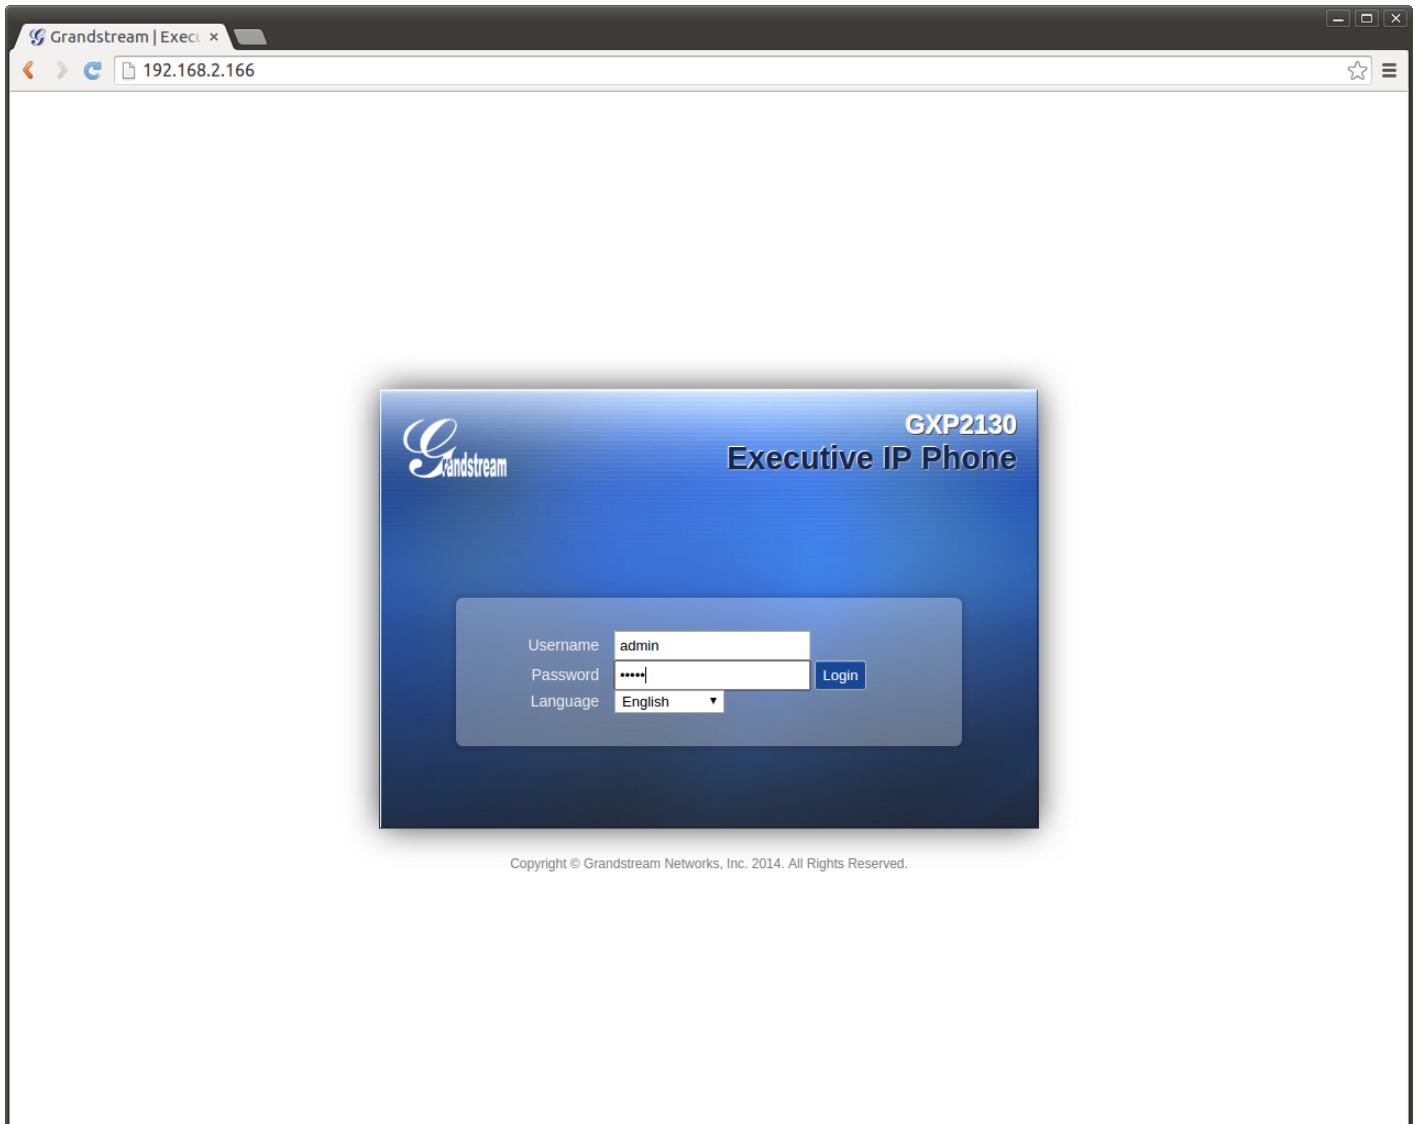

Locate the Upgrade and Provisioning menu

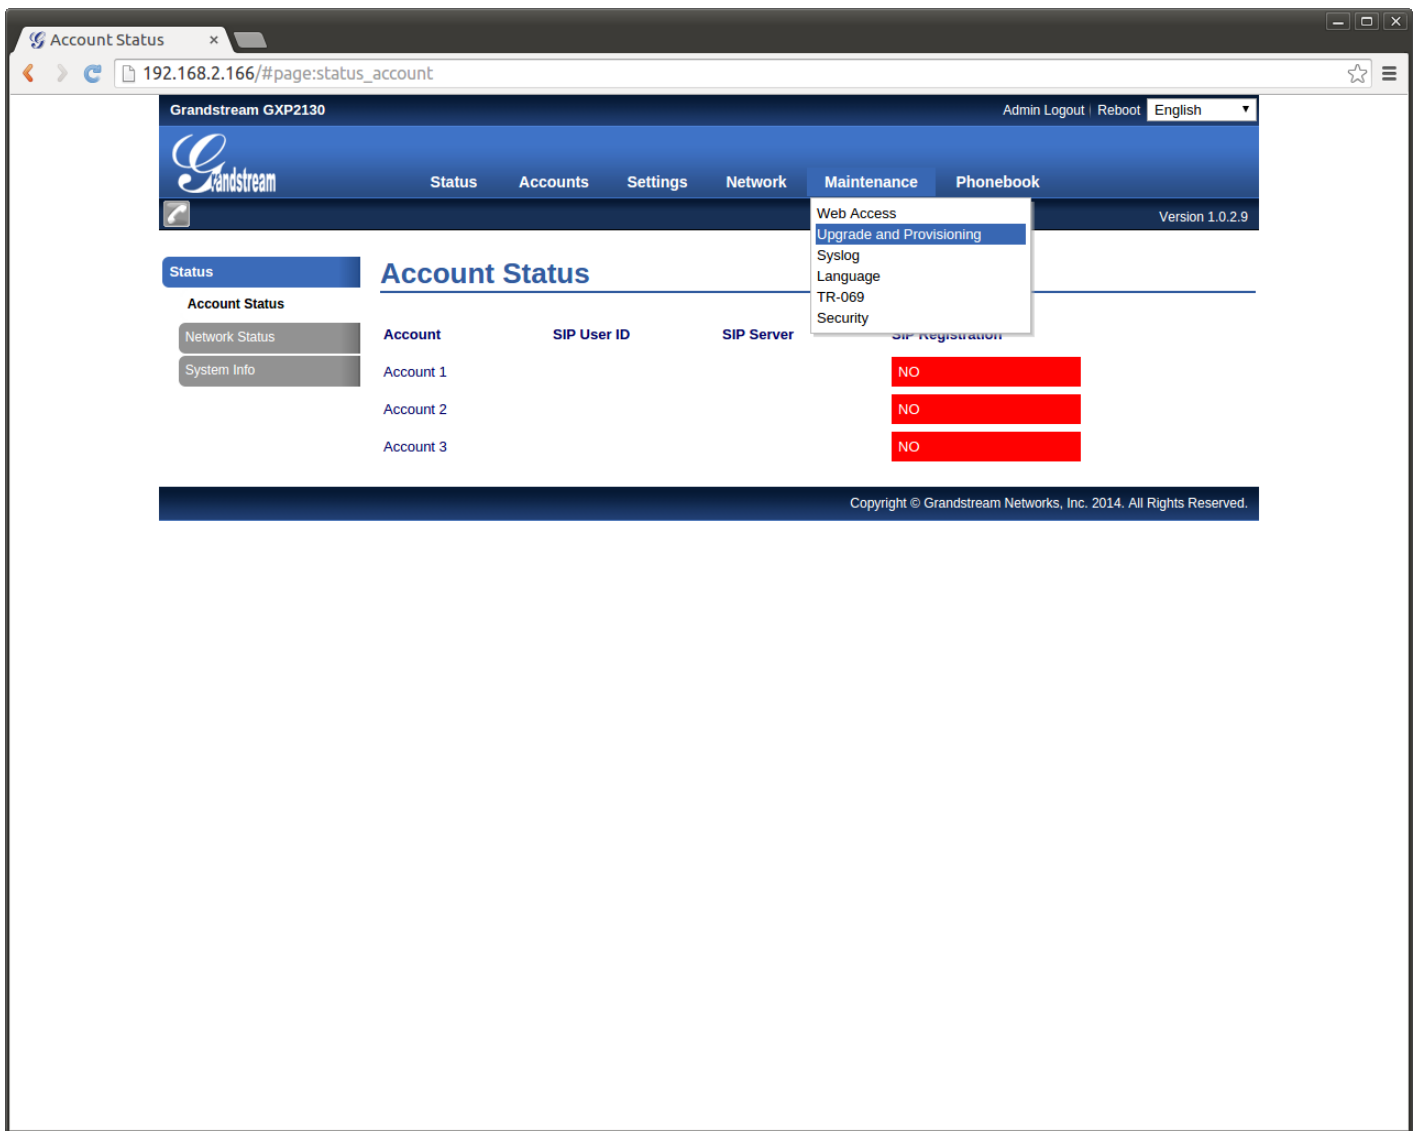

Configure as shown below

The screenshot shows the 'Upgrade and Provisioning' page of the Grandstream GXP2130 web interface. The page is titled 'Upgrade and Provisioning' and includes a sidebar with navigation links: Maintenance, Web Access, Upgrade and Provisioning (selected), Syslog, Language, TR-069, and Security. The main content area contains the following settings:

- Firmware Upgrade and Provisioning:**
 - ☒ Always Check for New Firmware
 - ☐ Check New Firmware Only When FW pre/suffix Changes
 - ☐ Always Skip the Firmware Check
- XML Config File Password:**
- HTTP/HTTPS User Name:**
- HTTP/HTTPS Password:**
- Upgrade via:** ☐ TFTP ☐ HTTP ☒ HTTPS
- Firmware Server Path:**
- Config Server Path:**
- Firmware File Prefix:**
- Firmware File Postfix:**
- Config File Prefix:**
- Config File Postfix:**
- Allow DHCP Option 43 and Option 66 to Override Server:** ☒ No ☐ Yes
- Allow DHCP Option 120 to Override SIP Server:** ☒ No ☐ Yes
- 3CX Auto Provision:** ☒ No ☐ Yes
- Automatic Upgrade:**
 - ☒ No
 - ☐ Yes, check for upgrade every 1008 minute(s)
 - ☐ Yes, check for upgrade every day
 - ☐ Yes, check for upgrade every week
- Hour of the Day(0-23):**
- Day of the Week (0-6):**
- Authenticate Conf File:** ☒ No ☐ Yes

In detail, select Upgrade via “HTTPS”, clean Firmware Server Path if not used, enter the Config Server Path as shown on the Configuration/Provisioning/Phones page, in this example: demo.mirtapbx.com/mirtapbx/autoprovision/RuLPYWuESutnFCtc/ Do not enter the protocol! Set the DHCP options to No if not used, save and apply. Reboot your phone.

Revision #1

Created 2026-09-22 09:31:38 UTC by Admin

Updated 2026-09-22 09:31:38 UTC by Admin